
# ROBINSON HELICOPTER COMPANY

# R22 MAINTENANCE MANUAL AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS RTR 060 VOLUME I

Production Certificate Number 424WE

Type Certificate Number H10WE

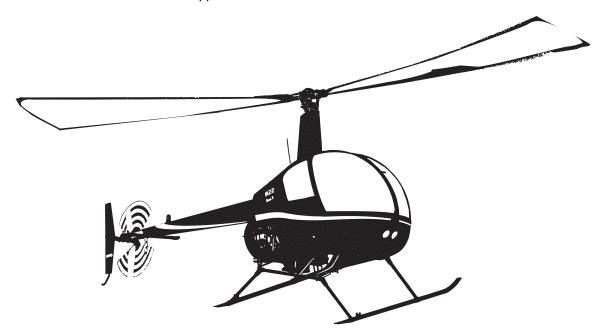

Robinson Helicopter Company Phone: (310) 539-0508 2901 Airport Drive Fax: (310) 539-5198

Torrance, California 90505-6115 Web: https://robinsonheli.com

United States of America

### **OFFICE HOURS**

Monday through Friday, 7:30 a.m. to 4:30 p.m., Pacific Time. Lunch hour is 11:30 a.m. to 12:30 p.m.

#### **HOLIDAYS**

Please visit https://robinsonheli.com for a list of holidays and company shutdowns.

#### **CUSTOMER SUPPORT AND SPARES ORDERS**

Please visit <a href="https://robinsonheli.com">https://robinsonheli.com</a> for Customer Support contact information. Procure parts from any R22 Dealer or Service Center, or order directly from RHC Customer Service via email, fax, or phone.

### **PUBLICATIONS**

Viewing RHC Maintenance Manuals (MMs) and Illustrated Parts Catalogs (IPCs) online at <a href="https://robinsonheli.com">https://robinsonheli.com</a> is recommended to ensure use of current data. Viewing MMs and IPCs offline via paper or digital download requires verification that the data is current. Refer to the online MM or IPC Revision Log for the list of current pages.

# SUBSCRIPTION ORDER AND RENEWAL FORMS

Subscription order and renewal forms are located at https://robinsonheli.com.

# **WARRANTY INFORMATION**

Helicopter and parts warranty information is located at https://robinsonheli.com.

# **CHAPTER LIST**

	Introduction
Chapter 1	General
Chapter 2	Inspection
Chapter 3	Life-Limited Components
Chapter 4	Airframe
Chapter 5	Landing Gear
Chapter 6	Powerplant
Chapter 7	Drive Train
Chapter 8	Flight Controls
Chapter 9	Rotor Systems
Chapter 10	Rigging, Track and Balance
Chapter 11	Environment Control
Chapter 12	Fuel System
Chapter 13	Instruments
Chapter 14	Electrical and Avionics Systems
Chapter 15	Furnishings
Chapter 16	Dimensions and Descriptions
Chapter 17	Jacking and Hoisting
Chapter 18	Weight and Balance
Chapter 19	Ground Handling
Chapter 20	Parking and Storage
Chapter 21	Placards and Markings
Chapter 22	Servicing
Chapter 23	Standard Practices
Chapter 24	Lights
Chapter 25	Doors and Windows
Chapter 26	Main Rotor
Chapter 27	Main Rotor Drive System
Chapter 28	Tail Rotor
Chapter 29	Tail Rotor Drive System
Chapter 30	Engine Controls
Chapter 31	Engine Oil System
Chapter 32	Police Version
Chapter 33	Electrical System
Chapter 34	Avionics
Chapter 35	Wiring Diagrams
Chapter 36	Special Tools
Chapter 37	Revision Log

Intentionally Blank

#### **TECHNICAL PUBLICATIONS**

# RECOMMENDED CHANGE REPORT

Please direct recommended changes to RHC Technical Publications via the email address listed below, by phone, or by submitting a duplicate of this completed form by fax or mail. Please include or have available the information detailed in this form.

Recommended changes may include but are not limited to general comments, corrections, omitted information, or clarification of instructions.

**Robinson Helicopter Company** 

Attention: Technical Publications

Please send recommendations to:

Phone: (310) 539-0508

Email: techpubs@robinsonheli.com

Fax: (310) 539-5198	2901 Airport Drive Torrance, CA 90505-6115 United States of America
Date:	Publication:
Name:	Chapter:
Company:	Section:
Helicopter Model:	Page:
Serial Number:	Revision:
Phone:	
Email:	
COMMENTS:	

Intentionally Blank