# **SECTION 1**

# **GENERAL**

# **CONTENTS**

	Page
Introduction	1-1
Cautions and Notes	1-2
External Dimensions	1-3
Descriptive Data	1-4
Performance Definitions	1-6
Weight and Balance Definitions	1-7
Conversion Tables	1-8

REVISED: 26 JAN 2024 1-i



#### SECTION 1

#### **GENERAL**

### INTRODUCTION

This Pilot's Operating Handbook is designed as an operating guide for the pilot. It includes the material required to be furnished to the pilot by 14 CFR parts 21, 27, and 36. It also contains supplemental data supplied by the helicopter manufacturer.

This handbook is not designed as a substitute for adequate and competent flight instruction or for knowledge of current airworthiness directives, applicable federal aviation regulations, and advisory circulars. Nor is it intended to be a guide for basic flight instruction or a training manual. It should not be used for operational purposes unless kept in a current status.

Assuring that the helicopter is in airworthy condition is the responsibility of the owner. The pilot in command is responsible for determining that the helicopter is safe for flight. The pilot is also responsible for remaining within the operating limitations as outlined by instrument markings, placards, and this handbook.

Since it is very difficult to refer to a handbook while flying a helicopter, the pilot should study the entire handbook and become very familiar with the limitations, performance, procedures, and operational handling characteristics of the helicopter before flight.

This handbook has been divided into ten numbered sections. Limitations and emergency procedures have been placed ahead of normal procedures, performance, and other sections to provide easier access to that information. Provisions for expansion of the handbook have been made by deliberate omission of certain paragraph numbers, figure numbers, item numbers, and pages noted as being intentionally blank.

REVISED: 10 JUL 2012 1-1

# **CAUTIONS AND NOTES**

Cautions and Notes emphasize important information and are used as follows:

**CAUTION** Equipment damage, injury, or death can result


if procedure or instruction is not followed.

**NOTE** Provides emphasis or supplementary infor-

mation.

REVISED: 10 JUL 2012 1-2

## **EXTERNAL DIMENSIONS**

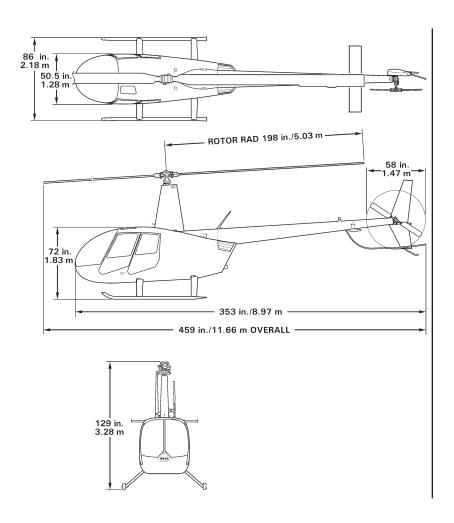

R44 II EXTERNAL DIMENSIONS (LATER AIRCRAFT SHOWN)

REVISED: 26 JAN 2024 1-3

#### **DESCRIPTIVE DATA**

## MAIN ROTOR

Articulation Free to teeter and cone,

rigid inplane

Number of Blades 2

Diameter 33 feet

Blade Chord 10.0 inches inboard,

10.6 inches outboard

Blade Twist -6 Degrees

Tip Speed at 102% RPM 705 feet per second

TAIL ROTOR

ı

Articulation Free to teeter,

rigid inplane

Number of Blades 2

I Diameter 58 inches

Blade Chord 5.1 inches (constant)

Blade Twist 0

Precone Angle 1 Degree

Tip Speed at 102% RPM 614 feet per second

DRIVE SYSTEM

Engine to Upper Sheave: Four double Vee-belts with

0.778:1 speed reducing ratio

Upper Sheave to Drive Line: Sprag-type overrunning

clutch

Drive Line to Main Rotor: Spiral-bevel gears with

11:57 speed reducing ratio

Drive Line to Tail Rotor: Spiral-bevel gears with

31:27 speed increasing ratio

## **DESCRIPTIVE DATA (cont'd)**

### **POWERPLANT**

Model: Lycoming I0-540-AE1A5

Type: Six cylinder, horizontally opposed, direct drive, air

cooled, fuel injected, normally aspirated

Displacement: 541.5 cubic inches

Maximum continuous rating: 205 BHP at 2718 RPM

(102% on tachometer)

5 Minute takeoff rating: 245 BHP at 2718 RPM

Cooling system: Direct drive squirrel-cage blower

## **FUEL**

Approved fuel grades and capacity: See Section 2.

#### OIL

Approved oil grades and capacity: See Section 8.

ISSUED: 3 OCT 2002 1-5

PERFORMANCE DEFINITIONS				
KIAS	Knots Indicated Airspeed is speed shown on the airspeed indicator.			
KCAS	Knots Calibrated Airspeed is speed shown on the airspeed indicator corrected for instrument and position error. (See Section 5 for position error correction.)			
KTAS	Knots True Airspeed is airspeed relative to undisturbed air. It is KCAS corrected for pressure altitude and temperature.			
$V_{ne}$	Never-Exceed Airspeed.			
$V_y$	Speed for best rate of climb.			
$V_h$	Stabilized level-flight speed at maximum continuous power.			
MSL Altitude	Altitude above mean sea level, indicated by the altimeter (corrected for instrument error) when the barometric subscale is set to the atmospheric pressure existing at sea level.			
Pressure Altitude	Altitude indicated by the altimeter (corrected for instrument error) when the barometric subscale is set to 29.92 inches of mercury (1013.2 mb).			
Density Altitude	Altitude in ISA conditions at which the air would have the same density (it is pressure altitude corrected for OAT).			
ISA	International Standard Atmosphere exists when pressure is 29.92 inches of mercury at sea level, temperature is 15°C at sea level, and temperature decreases 1.98°C per 1000 feet of altitude.			
ВНР	Brake Horsepower is actual power output of the engine.			
MAP	Manifold Absolute Pressure is the absolute pressure in the engine intake manifold.			
RPM	Revolutions Per Minute or speed of engine or rotor. (Shown by tachometer as percentage of 2665 engine RPM and 400 main rotor RPM).			
MCP	Maximum Continuous Power.			
TOP	Takeoff Power (limited to 5 minutes in the R44 II).			
Critical Altitude	Altitude at which full throttle produces maximum allowable power (MCP or TOP).			
TOGW	Takeoff Gross Weight.			

**REVISED: 21 OCT 2016** 1-6

### PERFORMANCE DEFINITIONS (cont'd)

OAT Outside Air Temperature

CHT Cylinder Head Temperature

GPH Gallons Per Hour

AGL Above Ground Level

IGE In Ground Effect

OGE Out of Ground Effect

ALT Alternator

#### WEIGHT AND BALANCE DEFINITIONS

Reference A vertical plane from which horizontal distances are Datum measured for balance purposes. The longitudinal

n measured for balance purposes. The longitudinal reference datum is 100 inches forward of the main

rotor shaft centerline for the R44 II.

Station Fore-and-aft location along the helicopter fuselage

given in terms of distance in inches from the

longitudinal reference datum.

Arm Horizontal distance from a reference datum to the

center of gravity (CG) of an item.

Moment The weight of an item multiplied by its arm.

Center of Location on the fuselage (usually expressed in inches

Gravity (CG) from the reference datum) at which the helicopter

would balance. CG is calculated by dividing the total

helicopter moment by total helicopter weight.

CG Limits Extreme CG locations within which the helicopter

must be operated at a given weight.

Usable Fuel Fuel available for flight planning.

Unusable Fuel Fuel remaining in the tank that cannot reliably

provide uninterrupted fuel flow in the critical flight

attitude.

Standard Weight of a standard helicopter including unusable

Empty Weight fuel, full operating fluids, and full engine oil.

Basic Empty Standard empty weight plus weight of installed op-

Weight tional equipment.

Payload Weight of occupants, cargo, and baggage.

Useful Load Difference between maximum gross weight and I

basic empty weight.

### **CONVERSION TABLES**

### METRIC TO ENGLISH

<u>Multiply</u>	Ву	To Obtain
centimeters (cm)	0.3937	inches (in)
kilograms (kg)	2.2046	pounds (lb)
kilometers	0.5400	nautical miles
kilometers	0.6214	statute miles (mi)
liters	0.2642	gallons, U.S. (gal)
liters	1.0567	quarts (qt)
meters	3.2808	feet (ft)
millibars (mb)	0.0295	inches of mercury (in. Hg)

## **ENGLISH TO METRIC**

Multiply	Ву	To Obtain
feet (ft)	0.3048	meters
gallons, U.S. (gal)	3.7854	liters
inches (in)	2.5400	centimeters (cm)
inches (in)	25.4000	millimeters (mm)
inches of mercury (in. Hg)	33.8639	millibars (mb)
nautical miles	1.8520	kilometers
pounds (lb)	0.4536	kilograms (kg)
quarts (qt)	0.9464	liters
statute miles (mi)	1.6093	kilometers

1 nautical mile = 1.1508 statute miles

1 statute mile = 0.8690 nautical mile

### **TEMPERATURE**

$${}^{\circ}F = 9/5 ({}^{\circ}C) + 32$$

 $^{\circ}C = 5/9 (^{\circ}F - 32)$